


# CERAMIC BASIN

## (WITHOUT HOLE)

### Installation Instructions

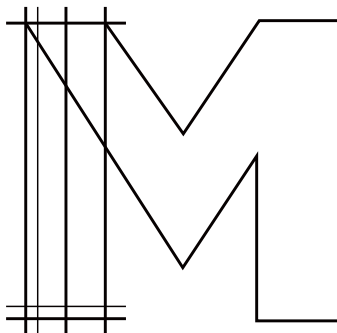

Merranox Technology (Shanghai) Co., Ltd


**Address**

Room 118, Building 20, No 1-42,  
Lane 83, Hong Xiang Bei Road,  
Lin Gang Xin District,  
Shanghai, China.

**Email** [info@merranox.com](mailto:info@merranox.com)


**Website** [www.merranox.com](http://www.merranox.com)

**IMPORTANT:** We recommend consulting a professional if you are unfamiliar with this type of installation.

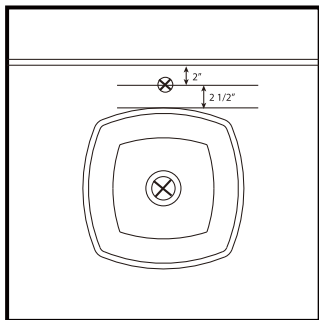


#### Step 1

Hold the ceramic basin at the desired installation location on countertop, ensure that the basin is level. By using the drain hole and faucet hole as a guide, mark the centerline with a pencil.

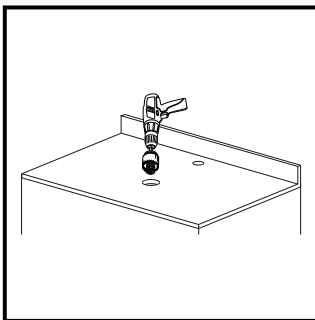


#### Step 2

By using the corresponding bit size, cut the marked area on countertop for drain opening.

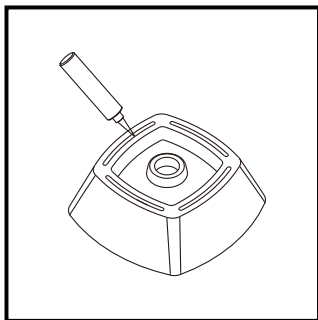


#### Step 3

Place the basin on position and ensure the drain hole able to align with the opening on countertop, and level in all directions. Apply clear silicone sealant (or preferred adhesive) around the underside of ceramic basin.

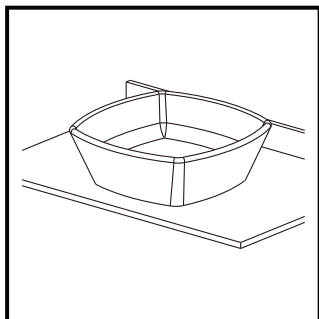

#### Step 4

Place the basin carefully on the countertop, make sure the drain hole is well aligned with the opening.

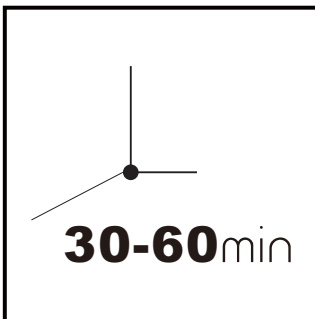

#### Step 5

Allow sealant to set at least for 30-60 minutes.

**IMPORTANT:** We recommend consulting a professional if you are unfamiliar with this type of installation.